




DYNAMIC[®]

www.DynamicClosures.com


1

START

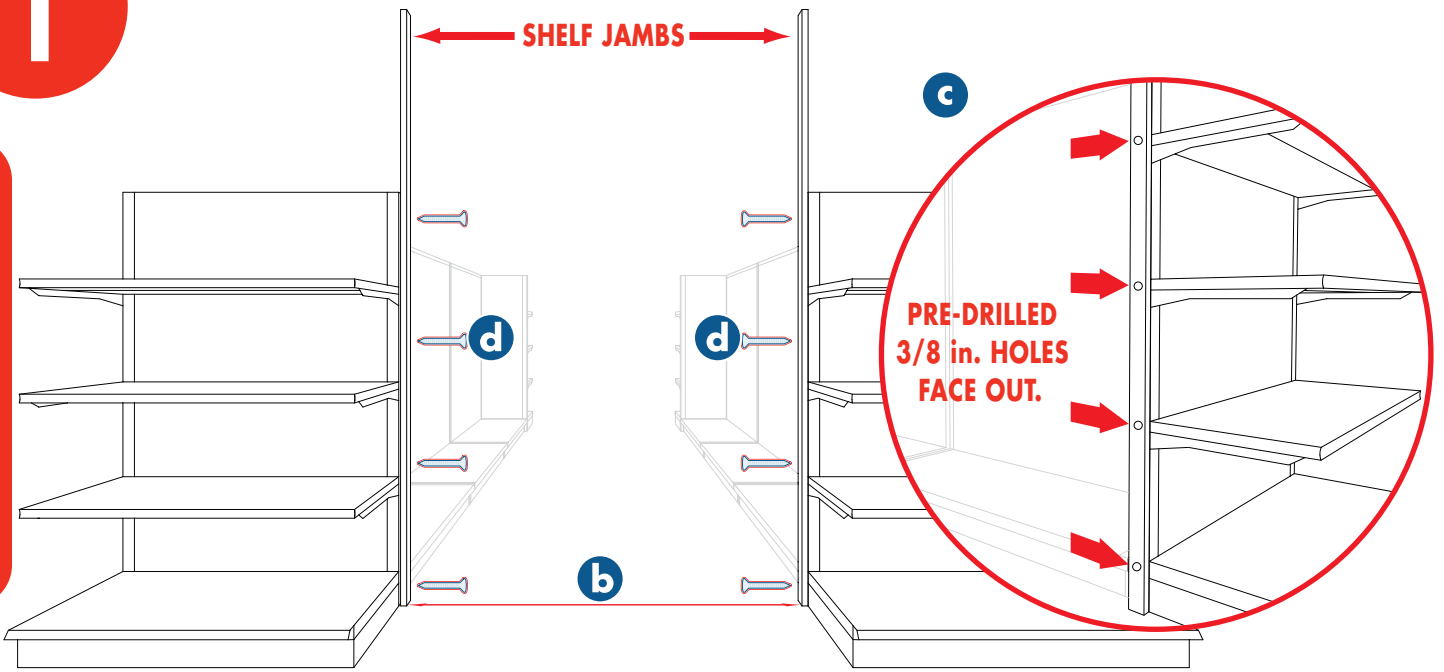


- a** Lift curtain from box and set aside. Do not cut strap.
- b** Check aisle opening to ensure shelf mullions are square.
- c** Place jamb onto mullion and drill 1/8 in. pilot holes into mullion using the pre-drilled holes in the jamb as a guide.
- d** Install the shelf jacks on each side of the shelving units using #10 x 2 in. screws.

2

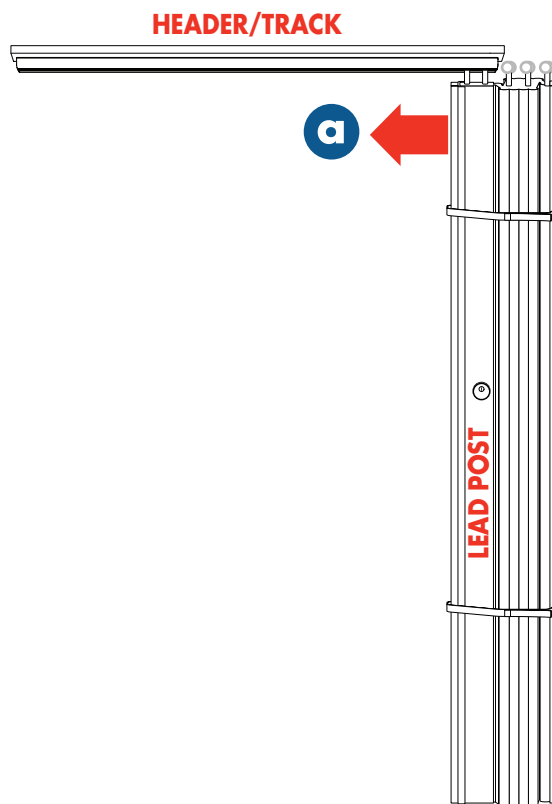


- a** Lay curtain on floor and slide onto header/track

3

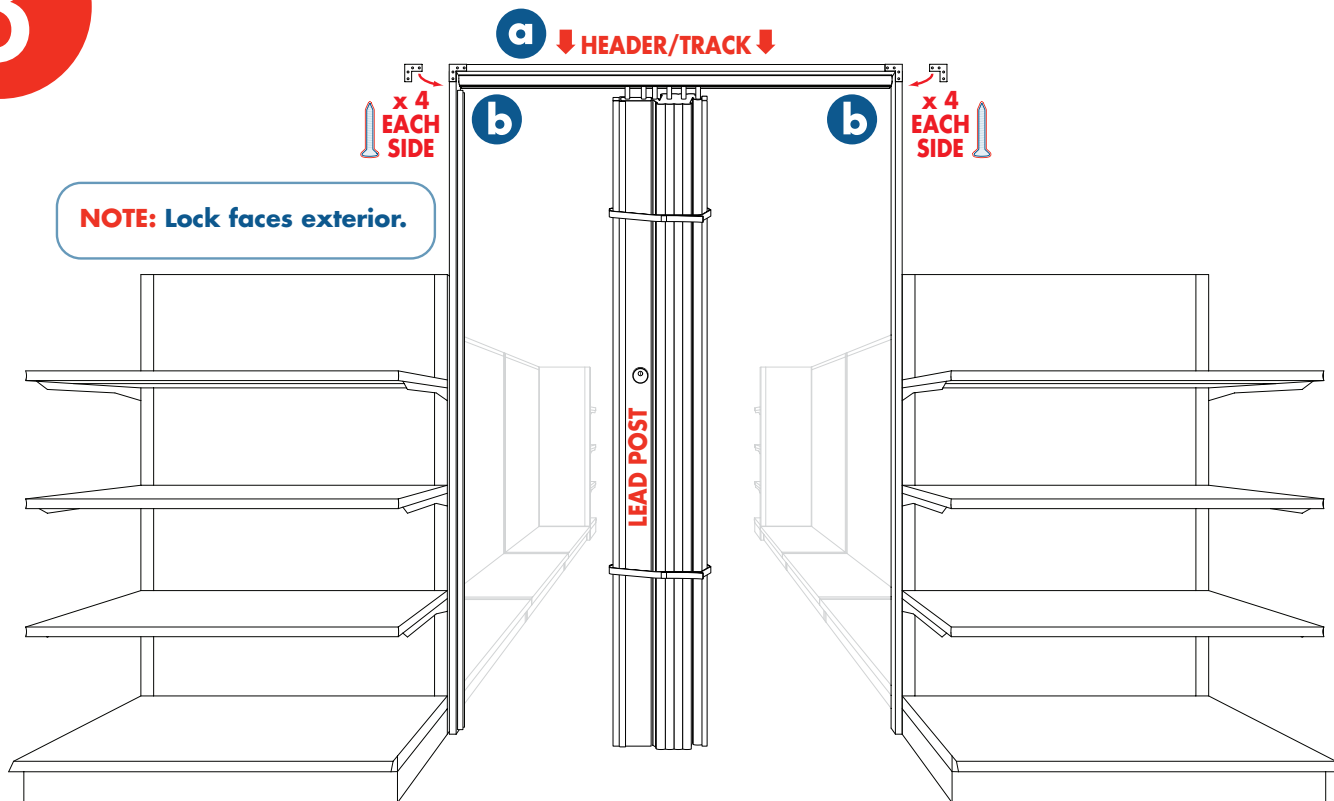


- a** Drop header/track and curtain onto shelf jamb.
- b** Secure header/track to shelf jamb using four (4) #8 x 5/8 in. taper screws for each right angle.

4

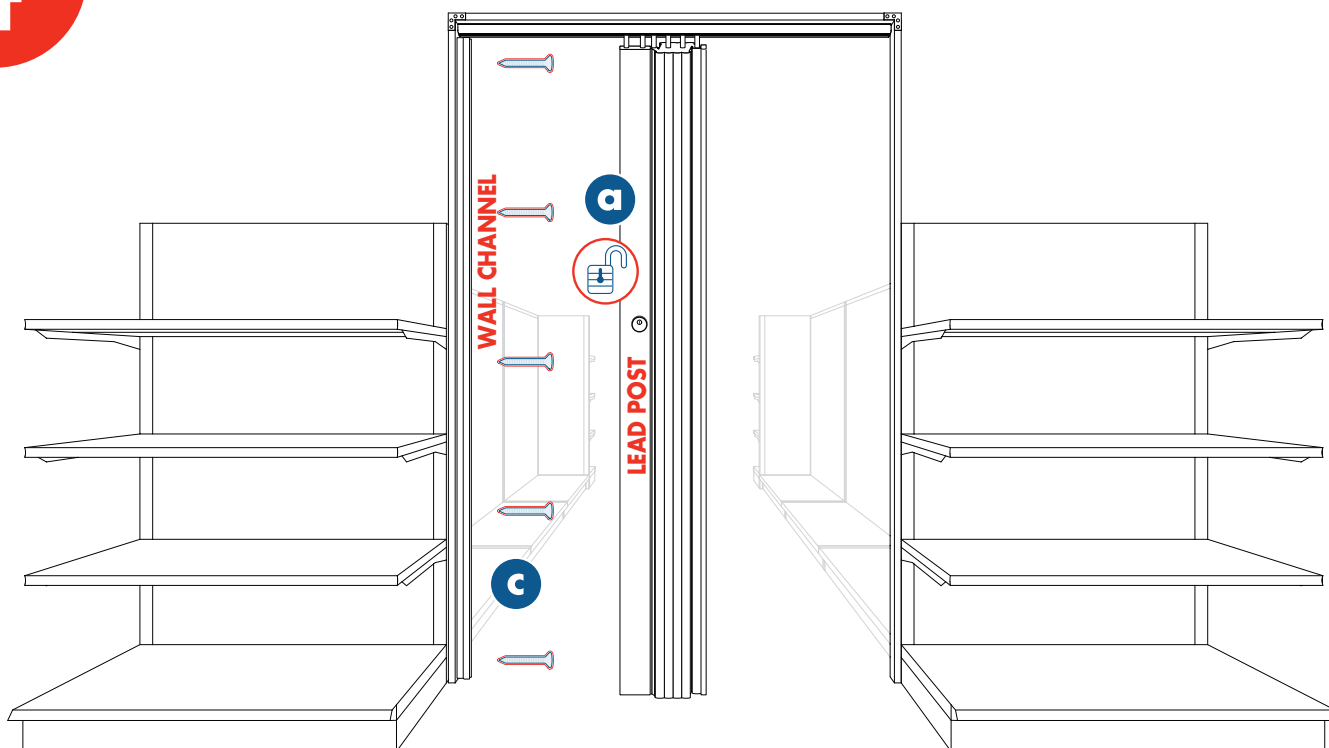

- a** Cut straps and unlock wall channel from lead post.
- b** Drill 1/8 in. pilot holes in shelf jamb using wall channel as guide.
- c** Install wall channel onto shelf jamb using #10 x 1 1/2 in. screws.

5

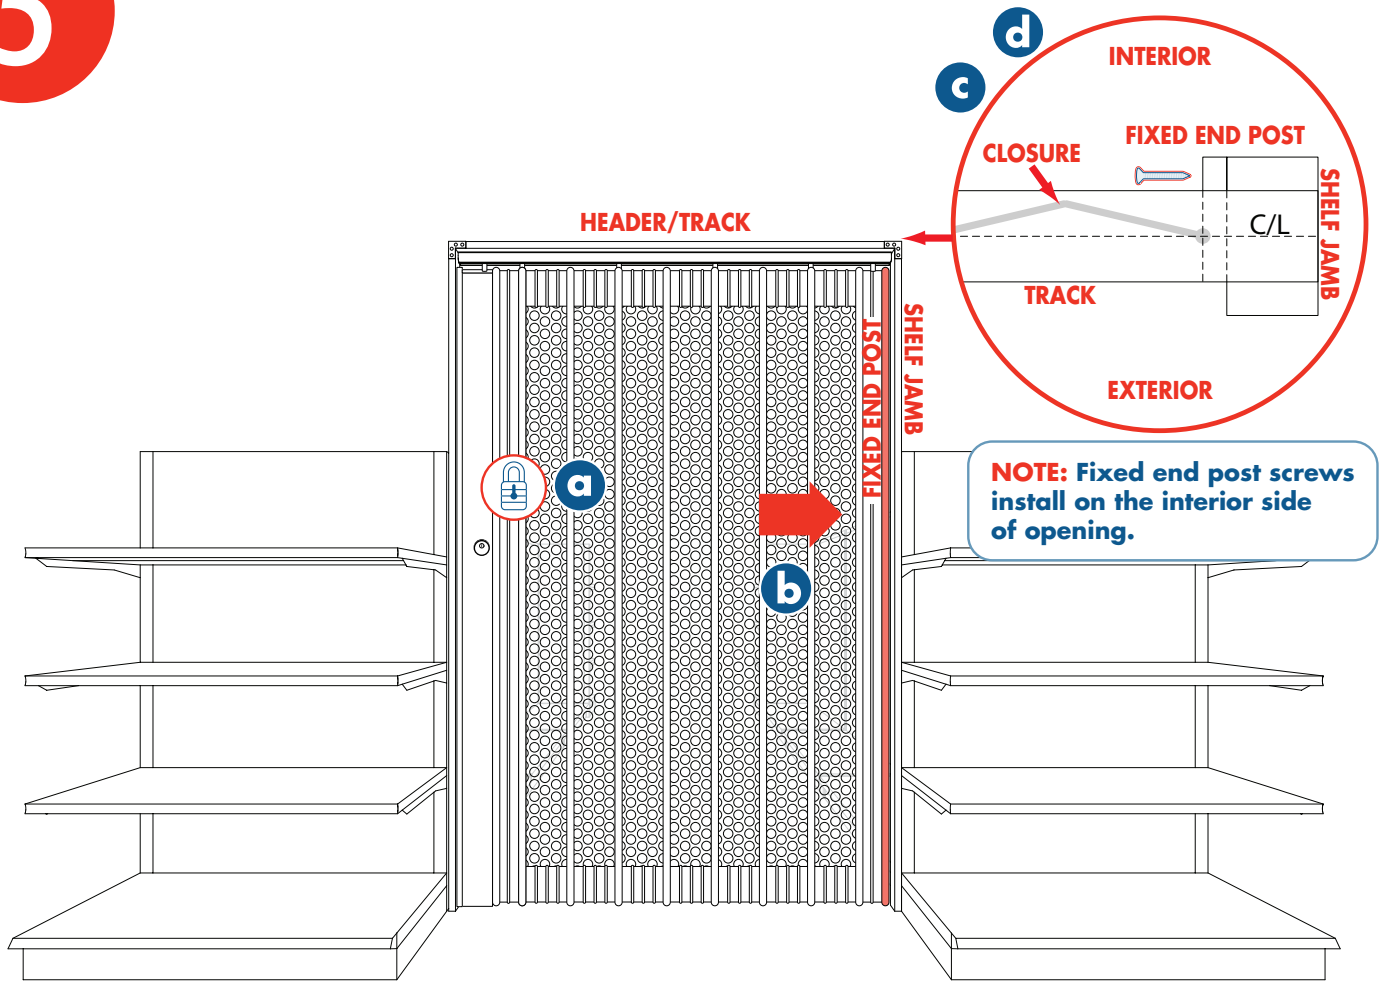

- a** Lock lead post into wall channel.
- b** Pull closure across opening and position fixed end post plumb and center on shelf jamb.
- c** Using fixed end post as a guide, drill 1/8 in. pilot holes in shelf jamb.
- d** Install fixed end post onto shelf jamb using #10 x 3/4 in. screws.
- e** Install black plugs in holes on fixed end post.