


# E-Panel Pocket Covering Installation


- A** Remove mask film from both sides of the panel.
- B** Attach plastic edge coverings to appropriate panel edges.
- C** Place 6" strips of double sided tape where needed.
- D** Install Side Panel(s) first.
- E** Install Back Panel (if there is one)

## PLASTIC EDGE PROTECTION INSTALL

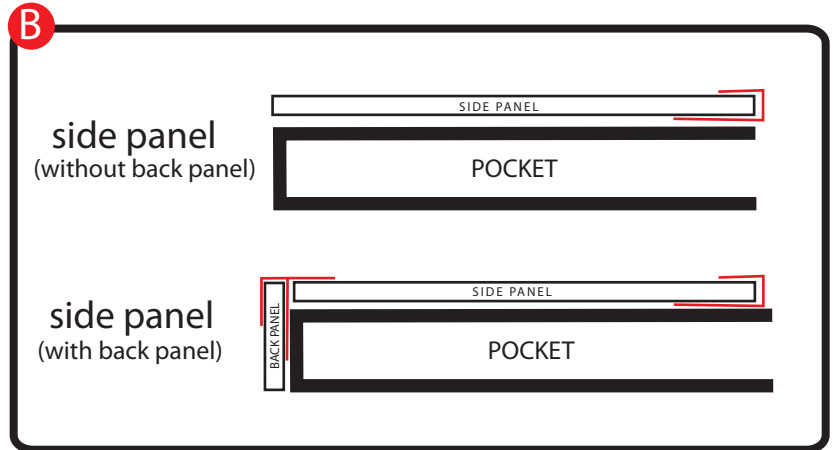


**WARNING:** When placing panel onto taped pocket, use extreme caution. Once the panel is stuck onto the pocket, it is very difficult to remove.

## TAPE APPLICATION

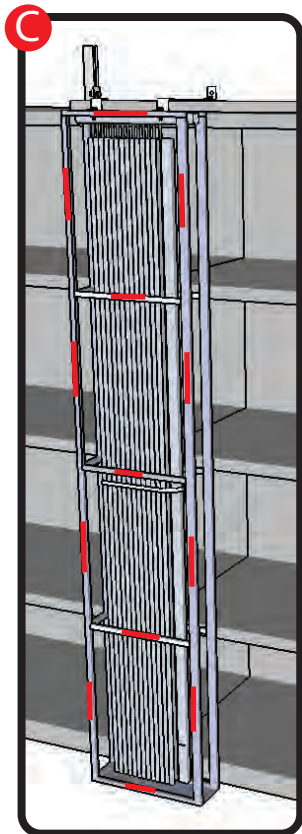


- A** Place 6" strips onto pocket-frame where indicated.
- B** Remove paper from double sided tape.

## SIDE PANEL INSTALL

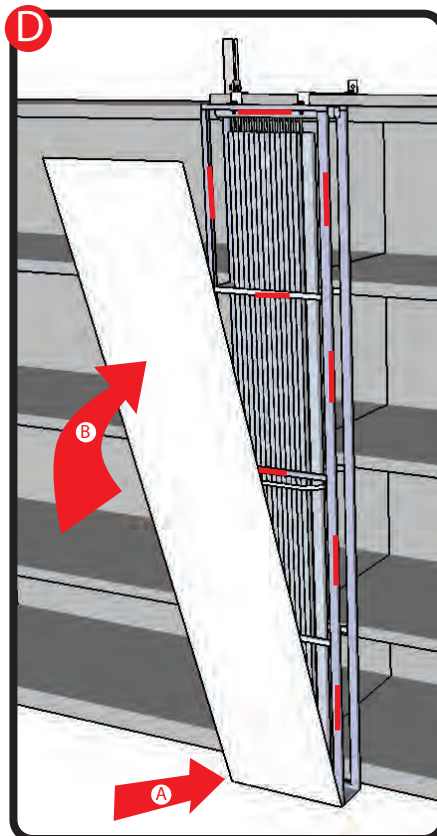

- A** Align bottom of panel with bottom of pocket
- B** Slowly lift panel up to pocket, repeatedly check alignment as you lift panel to pocket.
- C** Press panel firmly onto tape.

## BACK PANEL INSTALL (if needed)

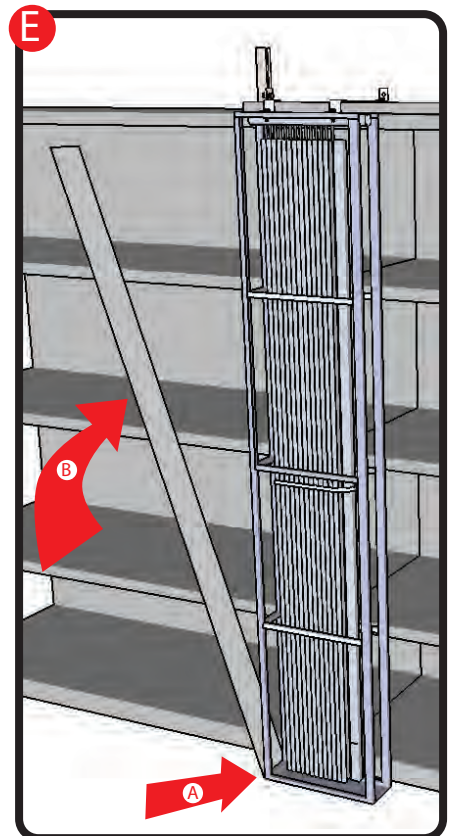

- A** Align bottom of panel with bottom of pocket
- B** Slowly lift panel up to pocket, repeatedly check alignment as you lift panel to pocket.
- C** Press panel firmly onto tape.